

User instructions.

Opening : Press 'START' and input your 6 digit password
(factory set is 123456 for guest code, 567890 for manager code)
Display will show "OPEN" and then turn knob handle clockwise.

Closing : Turn knob handle anti-clockwise.

Changing Guest code :

Press reset button (located at the back of the door)
Press 'START' button.
Put in your new password (6 digits)
Display will show "In"

Changing Manager code

Press 'START' button.
Put in your new password (6 digits)
Press reset button (located at the back of the door)
Display will show "In"

Other Function :

- Wrong try lock out : If wrong password is input 5 times in a row, system will lockout for 5 minutes.
- When batteries are weak, the display will show "Lo-batt" whenever you open the safes, Please change batteries immediately. (4 x AA size 1.5V)
- If the lock is not working, please use emergency key.
You can find emergency key hole after remove the batteries.

*** Caution : Please do not keep outside electricity supply kit and override key inside of the safes. Please keep them in the safe place other than inside of the safes.**