

# INSTRUCTION MANUAL EW

## 1-TO PROGRAM AND CHANGE THE USER CODE

- a- First, open the door of your safe, without turning rotary knob before you start to program your safe. Remove the battery compartment cover on the back of the door and place the batteries (4x1.5 batteries type AA) into the battery holder correctly. (Batteries included inside the safe).
- b- Press the red button behind the door while the door is open, the yellow light will be on with a short beep, please input the user code from 3-8 digits using any number from "0" to "9" within 30 seconds, then press "E" to confirm it.
- c- To change the user code, please operate it as same procedures as above.

## 2-TO OPEN THE SAFE

Input the user code you programmed, then press "E", the green light will be on, please turn the knob within 5 seconds and pull out to open the safe. If wrong digit is input, you can press "C" to cancel it.

**Note:** Each press the yellow light will flash with a short beep, indicating that micro processor confirmed it. If the yellow light keeps on flashing with the beep means the code is wrong. Three times' wrong code will result the micro processor refuse to accept the input for 20 seconds, if press three times' wrong code again will result the micro processor refuse to accept for 5 minutes.

## 3-TO CLOSE THE SAFE

Close the door and turn the knob anti-clockwise will lock the safe.

## 4-HOW TO USE YOUR OVERRIDE KEYS

For your convenience, we have engineered a manual override system for your safe, we supplied 2pcs override keys. These keys allow you to open the safe at all times, even when the batteries are run down or when you have forgotten your code. The keyhole is situated behind the override cover plate beside the knob, take off the cover, insert the override key and turn, then turn the knob to open the safe as usual.

## 5- TO REPLACE THE BATTERIES

When you input your personal code to open the safe, if the red light is on with green light, it means the batteries are low and you should change the batteries. To be sure the batteries are installed correctly. Please have a test before you close the door.

## 6-INSTALLING THE SAFE

To reduce the risk of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are two holes both in the bottom and on the back of the safe, therefore it can be fixed by the expansion bolts supplied.

## WARNING:

- a- Please keep the override keys of the safe in another safety place and do not inside the safe.
- b-If taking out batteries for a long time, you need to reset the password